

INKCUPS

BRITE TAGLESS PRINTER REGULATOR GUIDELINE

OBJECTIVE:

To ensure pressure regulator is set to 7 kg and to make sure the reading in the regulator is not due to the pressure in the tank only being at 7 kg (if pressure in tank fluctuates, it is possible the regulator will fluctuate too). Our goal is to prevent the pressure from going above 7 kg.

NOTE: PLEASE LOOK OUT FOR THE FOLLOWING



The pressure regulator must always be at 7 kg.

INSTRUCTIONS:



Lift the knob to unlock the regulator.

Lower pressure to a value less than 7 kg. (Ex.: 5 kg)

INKCUPS

BRITE TAGLESS PRINTER REGULATOR GUIDELINE



Slowly increase the regulator pressure to 7 kg, **DO NOT EXCEED 7 kg**

If the needle does not move as the knob is turned it means you have reached the current pressure inside the air compressor. Continuing to increase the setting of the regulator will increase set pressure to above 7 kg even if the gauge still shows 7 kg.



Once getting to 7 kg correctly, press the knob to lock the regulator.

